
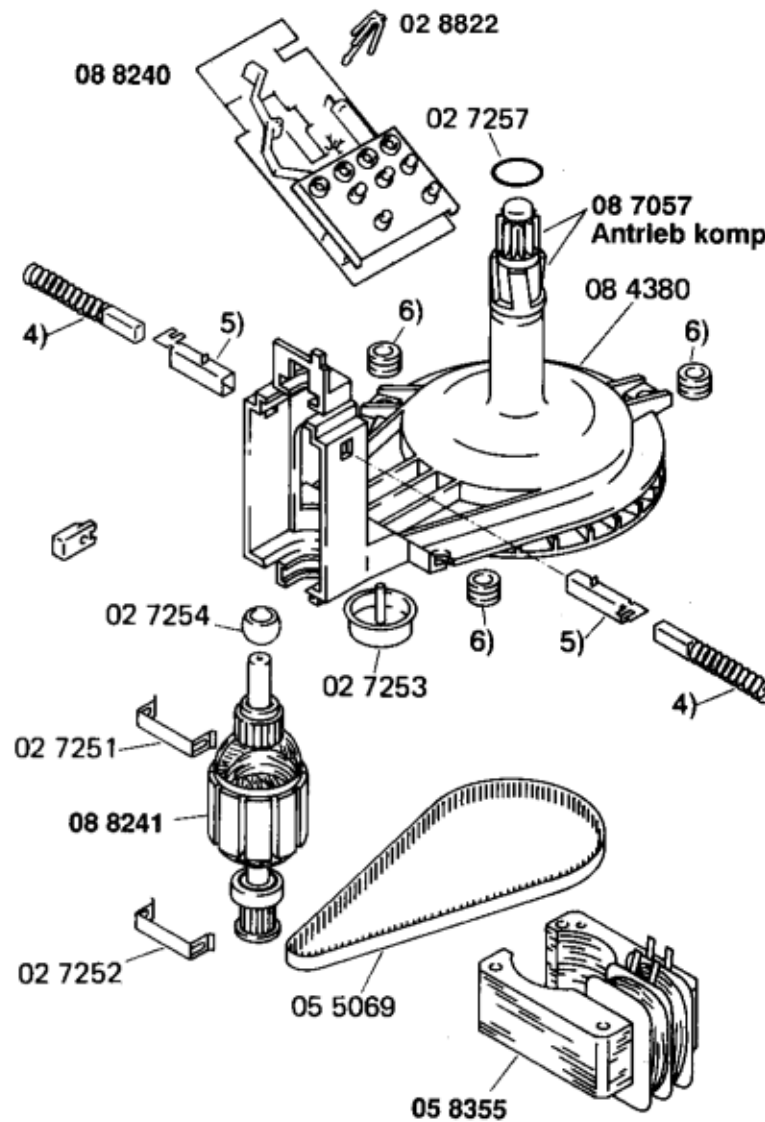


Ident - Nummern - Konstante
3740

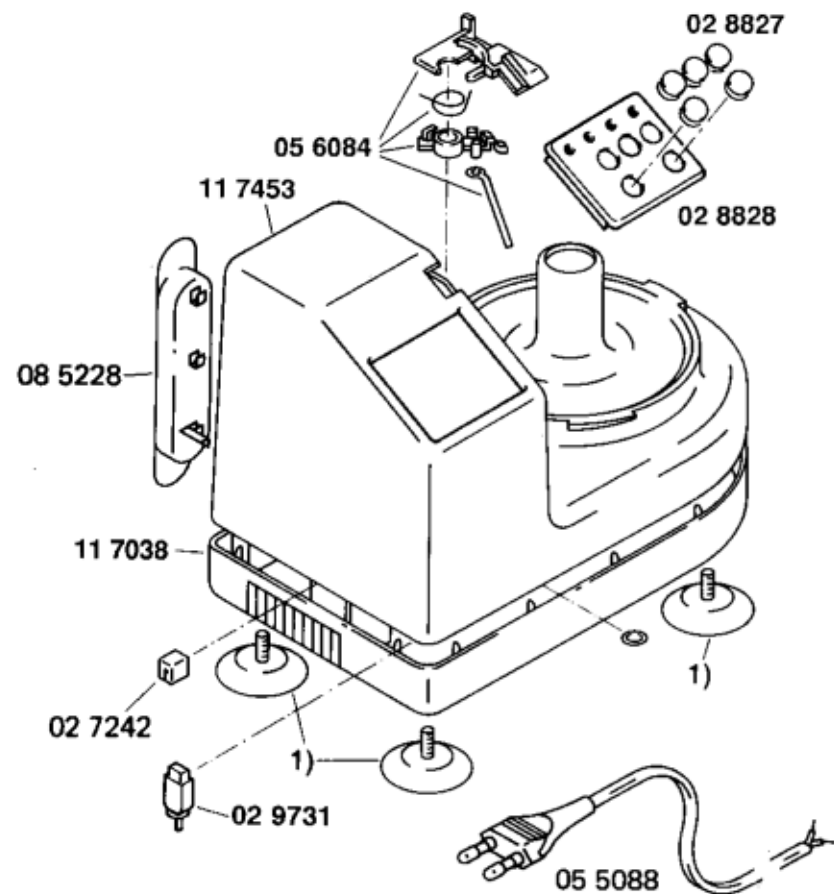

**51 4594
Gebrauchsanweisung**

1) 02 8829

4) 02 7248

5) 02 7249


6) 02 7256



Ident - Nummern - Konstante
3740




05 5879

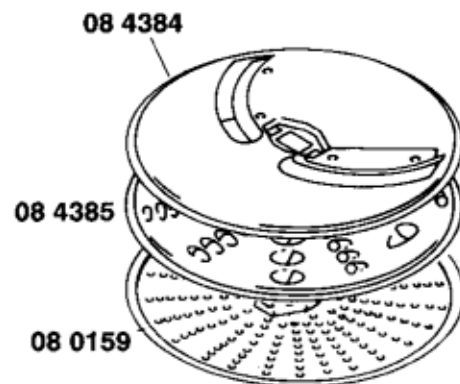

08 4384


08 4385

08 0159

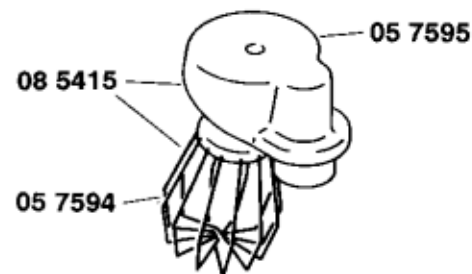


05 7595


05 7594

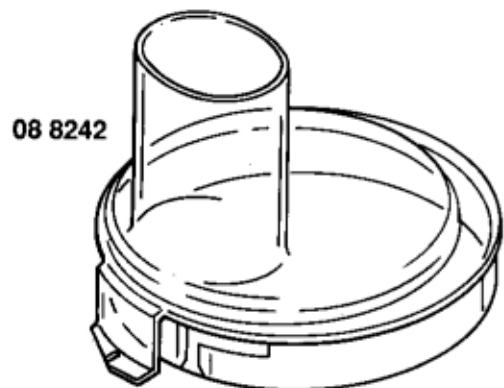

08 8242

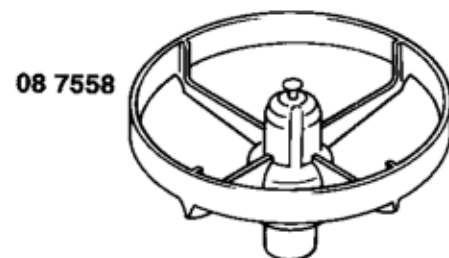


08 7558

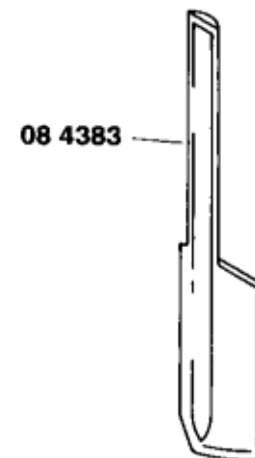

08 4383




05 7783

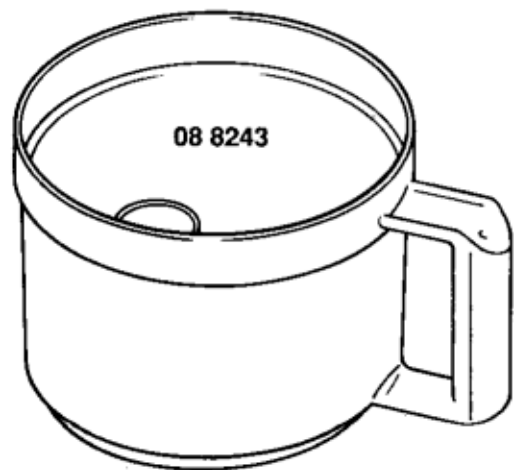

08 8243



08 5417

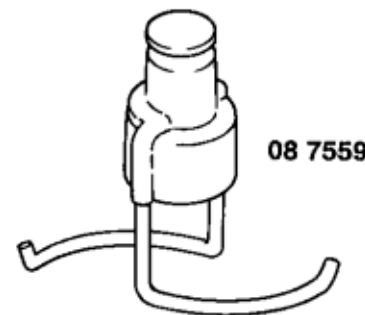

08 7559

[sparePartPage.Part.Repl]	[sparePartPage.Part.Repl]	[sparePartPage.Part.Repl]	[sparePartPage.Part.Description]
0001	00027242		Ütköző
0002	00027248		Szénkefe
0003	00027249		Vezetés
0004	00027251		Rugó
0005	00027252		Rugó
0006	00027253		Görgő
0007	00027254		Csapágy
0008	00027256		Ütköző
0009	00027257		Tömítés
0010	00028822		Kapocs
0011	00028827		Gombsapka
0012	00028828		Lemez
0013	00028829		Láb
0015	00055069		Hajtószíj
0016	00056084		Reteszelés-mechanikus
0018	00084380		Meghajtás
0019	00085228		Tartó
0020	00085457		Modul
0021	00087057		Meghajtótengely
0024	00117038		Burkolat alsó rész
0025	00117453		Burkolat
0027	00055879	00621924	Ütköző
0028	00057594		Habverő
0029	00057595		Lefedés
0030	00057783		Fogantyú
0031	00080159		Dörzstárcsa
0032	00084383		Kaparó
0033	00084384		Vágótárcsa

0034	00084385		Reszelőtárca
0035	00085415		Habverő
0036	00085417		Kés
0037	00087558		Tartó
0038	00087559		Gyúrókampó
0039	00088242		Fedél
0040	00088243		Tál